

ProCrease-M2.1

James Burn Manual Creasing Machine

(Item# 04PROCREASEM21)

Instructions:

1. Wipe down the machine before each use to remove dust and particles, to protect your paper and photos
2. Align your paper underneath the creasing block using the scale
3. Pull the handle to apply the crease
4. Adjust the depth of the crease for your particular application by simply applying different manual pressure

Maintenance Recommendations:

- When there are long periods of time between uses, brush the upper and lower pressing blocks with rust-proof grease to prevent the product from rusting over time

Troubleshooting:

- If the crease is mis-aligned, open the creasing block cover using a screwdriver to loosen the top and support screws on both sides. Ensure the copper sleeve is locked in place, and replace the cover and screws.

Specifications:

Model	ProCrease M2.1
Item Number	04PROCREASEM21
Manufacturer	James Burn USA
UPC/EIN	858237005356
Operation	Manual (Handle)
Pressure	Variable, depending on operator
Crease Length	19 ³ / ₁₀ "
Crease Width	1 mm
Dimensions	25 ³ / ₄ " W x 22 ¹ / ₄ " D x 6" H
Weight / Ship Weight (Approx.)	25 lbs. / 27 lbs.